

XTIRPA™

INSTRUCTION AND SAFETY MANUAL
XTIRPA 36" Mast-Davit Arm system with Removable
Adaptor for PPE

UNIVERSAL RESCUE SYSTEM
IN-8014

TO BE READ AND UNDERSTOOD BY USER PRIOR TO EACH USE



EC DECLARATION OF CONFORMITY (English)

Manufacturer established in the community:

*Produits de Services Publics INNOVA inc.,
1040, boul. Industriel, Granby, Québec, Canada J2J 1A4*

Declares that the following PPE product:

IN-8014 XTIRPA™ 36" Mast&Davit arm system with portable adapter for PPE

is in conformity with the provisions of the regulation (EU) 2016/425 and complies to the standard:

Personal fall Protection Equipment type B EN 795: 2012

is identical to the PPE product which was submitted to the EC Certificate of Conformity no: 2754/1363/160/03/20/0242 delivered by:

ALIENOR CERTIFICATION (2754)

21 rue Albert Einstein
ZA du SANITAL
86100 CHÂTELLERAULT- France

is submitted to the article 19c (module C2) of the regulation (EU) 2016/425, under the supervision of the notified body:

ALIENOR CERTIFICATION (2754)

21 rue Albert Einstein
ZA du SANITAL
86100 CHÂTELLERAULT- France

Produced at: GRANBY, Québec Canada, 05/08/2020

Michael Parker
Quality Manager

INTRODUCTION

WARNING

The XTIRPA system is part of a personal protection equipment system for fall protection, work positioning, or rescue, for use in confined spaces.

The user must read, understand and follow the manufacturer's instructions for each component or part of the complete XTIRPA system. These instructions must be provided to the user of the XTIRPA system. The user must read and understand these instructions before using the XTIRPA system. The manufacturer's instructions must be followed for proper use and maintenance of this product. Alterations or misuse of the XTIRPA system or of any component or part thereof or failure to follow instructions may result in serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer and derived therefrom.

IMPORTANT: The buyer must complete and return the limited warranty registration form.

The XTIRPA system was designed for persons needing a personal protection equipment system for fall protection, work positioning, or rescue, for use in confined spaces. The XTIRPA system is intended to act as a support structure or anchor for these uses. Due to its design and the use of an advanced composite, the XTIRPA system is one of the lightest and most ergonomic systems of its kind on the market. The XTIRPA system meets the standards EN 795: 2012 Type A, Type B and TS16415: 2013.

Always keep this instruction and safety manual available to any worker needing to use the XTIRPA system. Before each use, the user must read, understand and follow the manufacturer's instruction and safety manual.

Keep instructional and safety labels affixed to the XTIRPA system and its components and parts clean and legible at all times. Clean or replace if required. New labels can be obtained upon demand.

Establish a regular training program on the XTIRPA system for new & experienced workers, as further recommended in this instruction and safety manual. Establish a detailed inspection program for the XTIRPA system and document findings, as further recommended in this instruction and safety manual. Always inspect the XTIRPA system before each use and at least once a year.

The XTIRPA system and its components and parts have labels indicating the maximum capacity of each. Exceeding said maximum capacity may result not only in damages to the XTIRPA system or its components or parts but also in serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer derived therefrom.

The universal rescue system XTIRPA IN-8014, including various options of entry rings, various multiple options of barrel adapters and or mast & stem 914mm high x 229mm extension (36"x9 ") IN-2363 or 914mm high x 381mm extension mast (36"x15 ") IN-2395 conforming to document number MU8014-012ENG rev04.

Alienor certification (CE2754), ZA du SANITAL, 21 rue Albert Einstein, 86100 CHÂTELLERAULT France is the notified body involved in the initial production and certification control phase.

DESCRIPTION & INTERPRETATION OF MARKING SYMBOLS



This symbol is used to alert the user to a potential hazard. The safety of the worker is in jeopardy. It is imperative to follow the manufacturer's recommendations.



This symbol asks the user to read and understand the manual for this product before use.



This symbol specifies that the system can be used simultaneously by a maximum of 2 users.



Anchorage hardware must be qualified and experienced personnel. The installer must follow the anchorage hardware manufacturers recommendations at all times.



Periodic inspections of hardware must be done. In the occurrence of a fall or the safety of the equipment is in doubt, equipment must be immediately removed from service and inspected by qualified personnel before reuse.



Maximum permissible arresting force (MAF) .



The positioning pins must always be in place when manoeuvring personnel. Otherwise, serious injuries may occur.



Adaptors are designed to function only with the XTIRPA equipment or approved by the manufacturer.



This symbol indicates that the radius of use of the equipment must be at 0 degrees.

-1- APPLICATION

The XTIRPA system, and its many components and parts (including davit arm, manhole guard, removable adapter, permanent adapter, integrated mast, and side entry cart), are intended to be used as part of a personal protection equipment system for fall protection, work positioning, personnel handling, materials handling, or rescue, for use in confined spaces. The XTIRPA system is intended to act as a support structure or anchor for these uses.

-2- RESTRICTIONS

- a) **CAPACITY:** The maximum working load (CMT) of this product is 360lbs (164kg). According to CE (EN 795: 2012 and TS16415: 2013), use an EN-360 fall arrest system and / or EN-363 or EN-1496 recovery system.
- b) The manufacturer attests that anchoring devices have been tested accordingly to the current European standard (EN 795:2012 Type A) and, except otherwise stipulated, they are to be used by a single person using a shock absorber in accordance with regulation EN 355.
- c) **PRECAUTIONS:** Take the necessary precautions to limit injuries to the user and risks of damaging the XTIRPA system.
- d) Use of the XTIRPA system in areas where environmental hazards exist may require additional precautions to limit the possibility of injury to the user or damage to the XTIRPA system. Hazards may include, but are not limited to: high heat, fire, flame, smoke, fumes, caustic chemicals, corrosive environments, high voltage power lines, sudden changes of pressure, explosive or toxic gases or substances, water or risks of flooding, risks of wall, ceiling or floor collapsing, moving machinery and sharp edges.
- e) Install and secure all signaling and other precautionary and security measures, including but not limited to, notifying users, bystanders and vehicle operators circulating near the XTIRPA system of the presence of the XTIRPA system and its workers, before starting work.
- f) Wear all appropriate certified and recommended security equipment such as, but not limited to, hard hat, protective eyewear, leather gloves, protective clothing, work boots, harness in accordance with EN 361, flashlight and respiratory device if needed.

WARNING: Equipment shall not be used past its capacity, or in any other applications for which the equipment was not designed.

WARNING: The equipment should only be used by trained and competent persons in order for this product to be used safely.

- g) Always work in teams of at least two (2) people: 1 attendant and 1 confined space worker (the person attached to the lifeline cable or rope). These people must be qualified and trained on the XTIRPA system. They must have read and understood this instruction and safety manual before using the XTIRPA system. One person works in the confined space

(the user attached to the lifeline cable or rope) and the other (attendant) pays out the line and reels it in, keeps in contact with the person inside and remains available in case of any emergency. The attendant makes sure, at all times, that the user who is tying his lifeline cable or rope to his EN 361-compliant harness is in the right position. The attendant also assures that the XTIRPA system is well in place and that no load imbalance is possible.

IMPORTANT: During installation of the system, it is important to ensure stability throughout.

- h) Use only a full body harness conforming to EN 361 as well as certified lifeline cables and ropes, for any user of the XTIRPA system, having the appropriate specifications and designed and recommended for use under conditions specialized work such as those for which the XTIRPA system was designed, as indicated in this Instruction and Safety Manual. For the installation of cables or lifeline on the 13kN certified anchor points of the crane, see section 6.

IMPORTANT: When used as PPE, the system must be fitted with a device limiting the dynamic forces exerted on the user to a maximum of 6kN (1320 LbF).

- i) Plan your work program before starting. Have the required equipment, procedures and people, which must be qualified and trained on the XTIRPA™ system and who must have read and understood this instruction and safety manual before using the XTIRPA system, available to do the job.
- j) Keep all instructional and safety labels affixed on the XTIRPA system and its components and parts clean and legible at all times. Clean or replace if required. New labels can be obtained upon demand.

IMPORTANT: If the markings on the anchoring device are not legible after installation, it is recommended that supplementary markings next to the anchoring device be made.

WARNING: No modifications or additions to the equipment shall be performed without the authorization of the manufacturer, and all repairs shall be done as indicated by the operating procedure of the manufacturer.

WARNING: It is established and agreed that the equipment (system) is reserved for the use of one person maximum with the IN-2363 stem and two people maximum with the IN-2395 stem.

- k) Do not exceed 360lbs (164kg) per anchor, the maximum work load (CMT) of the system.
- l) Follow all applicable laws, regulations and standards for work, entry and exit in confined spaces.
- m) A person who has not read this instruction and safety manual, has not been trained in using the XTIRPA system and does not understand all operation, safety, maintenance, servicing

and storage instructions contained in this instruction and safety manual and in any other recommendations provided by the manufacturer or its certified trainers is not qualified to operate the XTIRPA system and does it at their sole risk, therefore waiving any and all claims, rights and recourses against the manufacturer and derived therefrom.

- n) Make sure to conform to relative demands regarding anchoring devices (E.g.: floor adapter, wall adapter, built-in, etc.) or ensure that the chosen structure that will be used has an anchoring point, and keep in mind minimal required resistance, equivalency and position.

WARNING: Anchoring devices must be installed only by competent persons or organizations.

- o) The maximum force applied by the system to the structure is, a vertical force of 13kN according to EN362, EN795: 2012 CE and TS16415: 2013 on the anchor to which the system is attached.

WARNING: The system must be appropriately checked, for example, by calculations or tests.

WARNING: The use of a base, structural anchor or fastener, if one exists, must be taken into account when calculating the amount of force supported by the anchor during strength and integrity testing.

- p) A rescue plan shall be put in place in order to account for all likely emergencies that could occur while working.

WARNING: Any modification or addition to the equipment cannot be done without the prior written consent of the manufacturer, and any repairs must be undertaken in accordance with the manufacturer's procedures.

WARNING: It is established and agreed that the equipment (system) is reserved for the use of one maximum person with the IN-2363 stem and two maximum people with the IN-2395 stem.

WARNING: It is important to place the XTIRPA system on a hard and level surface. Do not use the XTIRPA system on a soft surface, including, but not limited to, sand, grass, gravel and rocks. If you have any questions about use or maintenance or whether the XTIRPA system is appropriate for your job, please contact the manufacturer PSP INNOVA INC.

WARNING: For safety reasons, make sure when using the anti-drop system that you have enough space under the user, so as to avoid injury. If a fall occurs, there should be enough space to avoid a collision with the ground or any obstacle. See the diagram in Section 8 for calculating this distance.

XTIRPA SYSTEM REQUIREMENTS

IMPORTANT: If you have questions on the use, care or suitability of the XTIRPA system for your application, please contact the manufacturer INNOVA Public Utility Products Inc.

IMPORTANT: Record the product identification information from the ID label in the maintenance and inspection log of this instruction and safety manual.

IMPORTANT: Record purchasing date and also date of first use on the maintenance and inspection log sheet included in this safety instruction manual.

- a) The XTIRPA system is intended to be used as part of a personal protection equipment system for fall protection, work positioning, personnel handling, materials handling, or rescue, for use in confined spaces. The XTIRPA system is intended to act as a support structure or anchor for these uses. The XTIRPA system must be used only with adapters, anchors, connectors (EN 362), and other components, parts or subsystems that have been certified, approved and recommended by the manufacturer.

WARNING: This system should never be used to transport personas and material at the same time.

- b) Substitutions or replacements made with non-approved adapters, anchors, connectors (EN 362), other components, parts or subsystems may be incompatible, may jeopardize the safety and reliability of the complete XTIRPA system and may result in serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer derived therefrom.
- c) The connectors (EN 362) (hooks, carabiners, D-rings) must meet the EN362 standard.
- d) Make sure the lifeline cable or rope is positioned directly over the work area. Use only certified lifeline cable or rope, in perfect working condition, with appropriate specifications, including maximum leverage capabilities, for the intended use of the XTIRPA system.
- e) Owners must make sure that, before each use, all users of the XTIRPA system have read, understood and follow the manufacturer's Instructions and safety manual.
- f) Owners must also make sure that all users have successfully been trained in using the XTIRPA system, before allowing them to use the XTIRPA system, and at least annually thereafter.

IMPORTANT: During use, the manhole collar system must be appropriately sized and the adjustable wall adapter must be well-anchored in the wall.

- g) A person who has not read the instruction and safety manual, has not been trained in using the XTIRPA system and does not understand all operation and safety instructions, is not qualified to operate the XTIRPA system. An untrained user exposes himself and others to

possible serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer derived therefrom.

- h) Refer to and follow all EN standards or other local standards and regulations. Observe all the requirements of your local regulations for your applications.
- i) See other important operation instruction and safety information contained hereafter in this instruction and safety manual.
- j) It is imperative to supply all information in sufficient quantity to assure that different equipment articles are compatible when assembled as a system.

WARNING: It is possible that a hazard may occur while using multiple components, as one of them could affect the safety function of the system, if the safety function of one component can be affected by that of another component.

WARNING: It is essential for the safety of the user, if the product is resold to a destination outside the first country, that the reseller supplies the instruction manual, maintenance instruction log sheet for the periodic inspections and all associated repair instructions written in the native language of the country in which the product will be used. It is also required to supply all specific additional information for the equipment.

WARNING: Any persons with a medical condition which could cause a hazard to the user during normal operation and in emergency situations should avoid using the system.

- k) Life expectancy of the XTIRPA system and its components will be determined based on the conclusions of periodic and monthly inspections which will determine whether or not the product may remain in service.
- l) If possible, use a barricade to mark off and secure the work area.

WARNING: If the system has been used to stop a fall, it should not be used again until a competent person has, in writing, authorized its reuse.

WARNING: The safety of the user is in direct relation to the quality of maintenance and integrity of the equipment.

ENTRETIEN/RÉPARATIONS/REMISAGE

- a) Before each use, the user must read and understand the manufacturer's Instruction and safety manual. Ensure that the markings are visible at all times.
- b) Before each use, carefully inspect the XTIRPA system and all components and parts thereof. Any defective parts or components could result in serious injury or death.
- c) The standards require a regular inspection program for all confined space entry / retrieval equipment, as well as keeping up-to-date documented results of these inspections. Use the maintenance and inspection sheets included in this Instruction and Safety Manual to document your results.
- d) It is recommended that the anchoring device be marked with the most recent or next inspection date.
- e) Remove the XTIRPA system from service if a problem or an unsafe or defective condition is found during the inspection. Return to an authorized service center or the manufacturer for service.
- f) Replacement components and parts and additional maintenance and servicing procedures must be completed by an authorized service center which has been approved by the manufacturer, or by the manufacturer itself.
- g) If the crimping bolts of the adjustable wall adapter do not move freely, they must be lubricated with a light machine oil.
- h) Establish a monthly inspection which should be done by a competent person (person who is familiar, has been trained and has read and fully understands this instruction and safety manual), other than the user.

IMPORTANT: During use, the manhole collar system must be appropriately sized and the adjustable wall adapter must be well-anchored in the wall.

- i) Periodically clean the exterior of the davit arm and base, using water and mild detergent. Clean labels as required.
- j) When lowering the removable system, it is important to slowly place the system on the ground, to avoid damaging components.
- k) Store the XTIRPA system in a clean and dry environment, out of direct sunlight. Avoid areas with chemical or toxic vapors, substances or environments. Do not immerse or leave in direct contact with water, as corrosion and rust may occur. Inspect the XTIRPA system after any period of extended storage and at least once a month.
- l) The XTIRPA system and its components was designed for 10 years of continuous service. The life expectancy of the XTIRPA system and its components will be determined after periodic and monthly inspections that will determine whether or not the product may remain in service.
- m) All components and parts of the XTIRPA system should be stored in separate bags to facilitate transport and handling.

WARRANTY

The XTIRPA system offered by the manufacturer, INNOVA Public Utility Products Inc., is warranted against manufacturing defects in workmanship and materials for a period of two (2) years from the date of shipment of the product, which warranty only covers the original purchaser of the XTIRPA system. The manufacturer will promptly repair or replace all components or parts found to be defective, the manufacturer reserving the right to elect to have any alleged defective part returned to its plant for inspection before making a repair or replacement.

Only components or parts found to be defective by the manufacturer, at its sole discretion and upon any inspection requested and performed by the manufacturer, will either be repaired or replaced by the manufacturer, at its sole choice.

All claims must be forwarded in writing to the manufacturer, immediately upon discovery by owner, and must be accompanied by a copy of the proof of purchase of the original purchaser. manufacturer will issue a claim's number and give specific instructions to be followed as to claim's procedures and return of the defective part, if so requested by the manufacturer. Owner will collaborate with manufacturer and its representatives to allow inspection of any alleged defective part. All shipping costs to return defective components and parts to the manufacturer's plant are payable by owner, the cost of reshipping replacement components or parts being covered by the manufacturer.

This warranty does not cover equipment damages resulting from any other cause than a manufacturing defect in workmanship or materials, including, without limitation, damages resulting from abuse, lack of maintenance, improper handling or storage, voluntary damages, vandalism, accidental damages or damages resulting from impact or collision, damage in transit, damages caused by fire, explosion, chemical, toxic or corrosive vapors, substances or environments, water, normal corrosion and rust, storms, hail, and other acts of God, war insurrection, acts of terrorism or other damage beyond the control of the manufacturer. This warranty applies only to the original purchaser and is the only one applicable to the XTIRPA system, and is in lieu of all other warranties, expressed or implied. Without limiting the generality of the foregoing, the manufacturer will not be liable nor responsible for any other cost, damages or claims whatsoever, including for any special, incidental, indirect, or consequential damages whatsoever such as, but not limited to, damages for loss of profits or expected revenues, for business interruption, for personal injury, for failure to meet any duty including of good faith or of reasonable care, for negligence, and for any other pecuniary or other loss whatsoever, arising out of or in any way related to the use of or inability to use the XTIRPA system, even in the event of the fault, tort (including negligence), strict liability, breach of contract or breach of warranty, even if the manufacturer has been advised of the possibility of such damages. The manufacturer hereby disclaims all other warranties and conditions, either express, implied or statutory, including, but not limited to, any implied warranties or conditions of merchantability, of fitness for a particular purpose or application, and of lack of negligence or lack of workmanlike effort.

IMPORTANT: The buyer must fill out and return the Limited Warranty registration form for each product.

XTIRPA SYSTEM DESCRIPTION


WARNING

The XTIRPA system is part of a personal fall arrest, work positioning, personnel handling, material handling or rescue system for use in confined spaces. The XTIRPA system is intended to act as a support structure or anchor for these uses. The user must read, understand and follow the manufacturer's instructions for each component or part of the complete XTIRPA system. These instructions must be provided to the user of the XTIRPA system. The user must read and understand these instructions before using the XTIRPA system. The manufacturer's instructions must be followed for proper use and maintenance of the XTIRPA system. Alterations or misuse of the XTIRPA system or failure to follow instructions may result in serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer and derived therefrom.

DESCRIPTIONS

- STRAIGHT MANHOLE COLLAR 16" (IN-2287) TO 44" (IN-2180): (see illustration 1)
- ANGULAR MANHOLE COLLAR 5° X 16" (IN-2437) TO 30° X 32" (IN-2440): (see illustration 2)
- ANGULAR MANHOLE COLLAR 0° à 30° 16" (IN-2486) TO 32" (IN-2487): (see illustration 3)
- WALL ADAPTER MULTIPLE OPTIONS (ADJUSTABLE): (see illustration 4)
- WALL ADAPTER MULTIPLE OPTIONS (NON-ADJUSTABLE): (see illustration 5)
- 3" (76MM) MAST & DAVIT ARM 36" H X 15" REACH: IN-2395 (see illustration 6)
- MAST & STEM 914MM HIGH X 229MM EXTENSION (36"X9 "): IN-2363 (see illustration 7)
- XTIRPA STEM, MAST AND REMOVABLE ADAPTER SYSTEM FOR PPE: IN-8014 (see illustration 8)

Illustration 1:
Straight manhole collar
16" (IN-2287) to 44" (IN-2180)

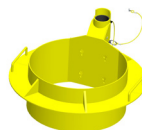

Diamètre / Diameter

16"-18" (406mm-457mm)	18"-20" (457mm-508mm)	20"-22" (508mm-559mm)	22"-24" (559mm-610mm)	24"-26" (610mm-660mm)	26"-28" (660mm-711mm)	28"-30" (711mm-762mm)	30"-32" (762mm-813mm)	32"-34" (813mm-864mm)	34"-36" (864mm-915mm)	36"-38" (915mm-965mm)	38"-40" (965mm-1016mm)	40"-42" (1016mm-1067mm)	42 1/2"-44" (1080mm-1118mm)
IN-2287 (Spécimen/ Test Sample)													IN-2180 (Spécimen/ Test Sample)


Illustration 2:
Angular manhole collar
5° x 16" (IN-2437) to 30° x 32" (IN-2440)



Diamètre / Diameter

Angle	Diamètre / Diameter							
	16"-18" (406mm-457mm)	18"-20" (457mm-508mm)	20"-22" (508mm-559mm)	22"-24" (559mm-610mm)	24"-26" (610mm-660mm)	26"-28" (660mm-711mm)	28"-30" (711mm-762mm)	30"-32" (762mm-813mm)
5°	IN-2437 (Spécimen/ Test Sample)							IN-2438 (Spécimen/ Test Sample)
10°								
15°								
20°								
25°								
30°	IN-2439 (Spécimen/ Test Sample)							IN-2440 (Spécimen/ Test Sample)

Illustration 3:
Angular manhole collar 0° à 30°
16" (IN-2486) to 32" (IN-2487)

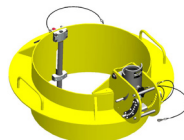

Diamètre / Diameter

16"-18" (406mm-457mm)	18"-20" (457mm-508mm)	20"-22" (508mm-559mm)	22"-24" (559mm-610mm)	24"-26" (610mm-660mm)	26"-28" (660mm-711mm)	28"-30" (711mm-762mm)	30"-32" (762mm-813mm)	30"-32" (762mm-813mm)
IN-2486 (Spécimen/ Test Sample)							IN-2487 (Spécimen/ Test Sample)	

**** Incluant/including : IN-2475 (24"-26" (610mm-660mm)) 0° à/to 45° ****

Illustration 4:
Adjustable wall
adapter

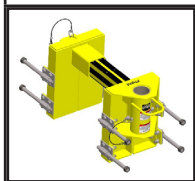


Illustration 7: IN-
2363



Illustration 5 :
Non-adjustable
wall adapter (mul-
tiple options)



Illustration 8: IN-8014

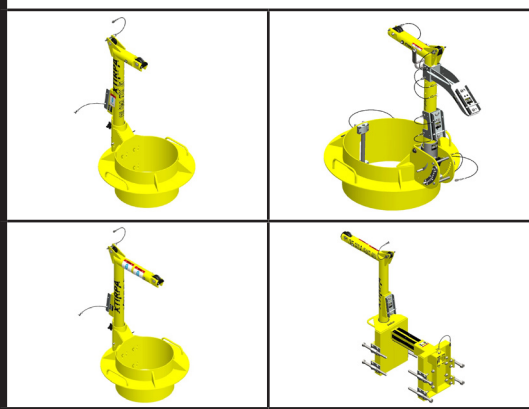


Illustration 6: IN-
2395



OPERATION, ASSEMBLY AND USE XTIR-PA SYSTEM

WARNING: The XTIRPA system is part of a personal fall arrest, work positioning, personnel handling, material handling or rescue system for use in confined spaces. The XTIRPA system is intended to act as a support structure or anchor for these uses. The user must read, understand and follow the manufacturer's instructions for each component or part of the complete XTIRPA system.

WARNING: These instructions must be provided to the user of the XTIRPA system. The user must read and understand these instructions before using the XTIRPA system. The manufacturer's instructions must be followed for proper use and maintenance of the XTIRPA system. Alterations or misuse of the XTIRPA system or failure to follow instructions may result in serious injury or death, for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer and derived therefrom.

IMPORTANT: If you have questions on the use, care or suitability of the XTIRPA system for your application, please contact the manufacturer INNOVA Public Utility Products Inc.

IMPORTANT: Record the product identification information from the ID label in the maintenance and inspection log of this instruction and safety manual.

OPERATION AND INSTALLATION OF EPI SYSTEM WITH STRAIGHT MANHOLE COLLAR 16" (IN-2287) TO 44" (IN-2180) and ANGULAR MANHOLE COLLAR 5° X 16" (IN-2437) TO 30° X 32" (IN-2440)

1. Make sure that all components and parts are in perfect working order and that everything is functioning correctly


2. Secure the work area and remove the manhole cover.



3. Insert the collar into the manhole, making sure that it is ledged firmly around the manhole's circumference.



4. Using the key attached to the ring, adjust the retaining clamp to prevent the ring from tipping back.



5. Insert the mast into the designed spot.



6. Lock the mast with a locking pin.



7. Use the crimping handle behind the base to stabilize the mast.



WARNING: Make sure that the system is in the right position and that all components are locked with the provided pin.

WARNING: It is important to place the XTIRPA system on a hard and level surface. Do not use the XTIRPA system on a soft surface, including, but not limited to, sand, grass, gravel and rocks. If you have any questions about the use or maintenance or whether the XTIRPA system is appropriate for your job, please contact the manufacturer PSP INNOVA INC.

OPERATION AND INSTALLATION OF THE ADJUSTABLE WALL ADAPTER SYSTEM FOR PPE

1. Make sure that all components and parts are in perfect working order and that everything functions correctly.

2. Install the adaptor on the low concrete wall.



3. Adjust the removable part so that there is the smallest possible gap (less than 50 mm) for the bolts and lock with the pin.



4. With the torque wrench, apply specific torque to each of the eight bolts.



5. Insert the mast into the provided wing.



6. Lock the mast with the locking pin.



WARNING: Make sure that the system is in the right position and that all components are locked with the provided pin.

WARNING: It is important to place the XTIRPA system on a hard and level surface. Do not use the XTIRPA system on a soft surface, including, but not limited to, sand, grass, gravel and rocks. If you have any questions about the use or maintenance or whether the XTIRPA system is appropriate for your job, please contact the manufacturer PSP INNOVA INC.

WARNING: Make sure that the system is in the right position and that all components are locked with the provided pin.

WARNING: It is important to place the XTIRPA system on a hard and level surface. Do not use the XTIRPA system on a soft surface, including, but not limited to, sand, grass, gravel and rocks. If you have any questions about the use or maintenance or whether the XTIRPA system is appropriate for your job, please contact the manufacturer PSP INNOVA INC.


OPERATION AND INSTALLATION OF THE EPI SYSTEM WITH ANGULAR MANHOLE COLLAR 0-30 DEGREE 16" (IN-2486) TO 32" (IN-2487) SYSTEM

1. Make sure that all components and parts are in perfect working order and that everything is functioning correctly.

2. Secure the work area and remove the manhole cover. Insert the collar into the manhole, making sure that it is ledged firmly around the manhole's circumference.



3. Using the key attached to the ring, adjust the retaining clamp to prevent the ring from tipping back.



IMPORTANT: The anti-tip mechanism must be in contact with the inside of the opening at all times to prevent the ring from tipping backwards.

4. Insert the mast into the designed spot.



5. Lock the mast with a locking pin.



6. Adjust the mast angle until it is in the upright position.



7. Use the crimping handle on the back of the base to stabilize the mast at the desired angle.



WARNING: Make sure that the system is in the right position and that all components are locked with the provided pin.

WARNING: It is important to place the XTIRPA system on a hard and level surface. Do not use the XTIRPA system on a soft surface, including, but not limited to, sand, grass, gravel and rocks. If you have any questions about the use or maintenance or whether the XTIRPA system is appropriate for your job, please contact the manufacturer PSP INNOVA INC.

OPERATION AND INSTALLATION OF THE WINCH OR LIFELINE ON BASE OF DAVIT ARM DESIGNED FOR THIS TYPE OF EQUIPMENT

1. Install the winch or lifeline on the base of the davit arm designed for use with this type of equipment. Use a locking pin which was provided with the winch or lifeline bracket and lock it.

2. On the IN-2395 mast / stem, it is possible to install a second lifeline on the gray "D" anchor point.



3. Remove the pin near the small pulley and rotate the semi-circular bracket in order to pass the cable between the two pulleys. Once the cable is between the two pulleys, replace the pin and bracket so that the cable cannot slip out.



WARNING: It should be noted that only plates, support and adaptors that have been certified, approved and recommended by the manufacturer can be used.

IMPORTANT: Make sure that the lifeline cable or rope is directly positioned above the working area. Only use certified lifeline cables or ropes in perfect condition, that have the appropriate specifications, including maximum lifting capacity, for the intended use of the XTIRPA system.

IMPORTANT: If necessary, use a manhole guard to secure the working area and to prevent falls.

IMPORTANT: A fall protection harness in accordance with EN 361 is the only body support device allowed to be used for fall protection.

IMPORTANT: The fall protection harness in accordance with EN 361 must be attached to the winch's cable or rope by the anchoring point of the EN 361-compliant harness.

WARNING: The manufacturer's instruction and safety manual must be followed for proper use and maintenance of this product. Alterations or misuse of this product or failure to follow instructions may result in serious injury or death for which the manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against the manufacturer derived therefrom.

WARNING: Any system must be immediately removed from circulation if its safety is questioned, or if it was used to stop a fall. It is imperative not to use the system before a competent person authorizes in writing the integrity of the product before its reuse.

WARNING: For the fall arrest systems, it is essential for safety that the anchoring device or the anchor point is always correctly positioned and that effort is made so as to reduce the risk of falls and the height of fall. It is essential that the device or the anchor point is placed above the position of the user.

WARNING: When using a fall arrest system, it is essential, for security measures, to verify the required open space underneath the user on the workplace before each use, if possible, so that in case of a fall that there is no collision with the ground or any object in the area.

WARNING: The XTIRPA system must only be used with adapters, anchors, connectors (EN 362), pulleys, and other components, parts and subsystems certified, approved and recommended by the manufacturer. Substitutions or replacements made with adapters, anchors, connector (EN 362), and other components, parts or subsystems may be incompatible, may jeopardize the safety and reliability of the entire XTIRPA system and may cause serious injury or death, for which the Manufacturer disclaims any warranty or liability whatsoever, the user, owner and purchaser of the XTIRPA system waiving all claims, rights and remedies against the manufacturer arising therefrom. The connectors (EN 362) (hooks, carabiners, D-rings) must meet the EN362 standard.

KEEP THE FOLLOWING INSTRUCTIONAL AND SAFETY SIGNS CLEAN AND LEGIBLE AT ALL TIMES

XTIRPA
IN-2363
Mast / davit arm

Standards:
Meets standards
EN 795:2012, ANSI Z359.1-2017, OSHA 1910.66, CSA Z259.2-1-98, EN 795:2012

Maximum Working Load:
360 lb (164 kg)

Materials:
Aluminum, Stainless Steel, Delrin™

Inspection:
Before each use, inspect the XTIRPA system to determine that it is in perfect working condition. Refer to the user's manual for the inspection frequency made by a competent person. The XTIRPA system should be inspected by a competent person in accordance with the user's instruction and safety manual.
Do not use if inspection reveals a problem, an unsafe or defective condition. Must not be repaired by other than manufacturer or an authorized service center.

Not user repairable.

Installation and use:
Ensure that all components and parts are in perfect working condition and working properly. Make sure that your anchoring point is in perfect working condition.
Install the mast / davit arm in a base and lock it with the lock pin. Position the winch support bracket at the desired height and lock it with the two lock pins attached on the bracket. Install the winch on the bracket, pass the cable into one of the corner pulleys. Put back the pin so the cable cannot go out. Finally, pass the cable into one of the head pulleys. Put back the pin so the cable cannot go out.
Only adaptors and brackets approved, certified and recommended by the manufacturer are to be used with the XTIRPA system.

Warnings:
For all other mast / davit arm application, consult the manufacturer or distributor. Manufacturer's instructions must be followed for proper use and maintenance of this product. Alterations or misuse of this product or failure to follow instructions may result in serious injury or death, for which manufacturer and distributor disclaim all warranties and liabilities whatsoever. User, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against manufacturer and distributor derived there from.

Products manufactured by:
Innovative Public Utility Products Inc.
1040 boul. Industriel
Granby, QC, Canada J2J 1A4
www.xtirpa.com
S2363-002 revB

Made in Canada

XTIRPA
IN-2395
Mast / davit arm

Standards:
Meets CE standards
EN 795:2012 and TS 16415:2013

Maximum Working Load:
360 lb (164 kg) per anchor.

Materials:
Aluminum, Stainless Steel, Delrin™

Inspection:
Before each use, inspect the XTIRPA system to determine that it is in perfect working condition. Refer to the user's manual for the inspection frequency made by a competent person. The XTIRPA system should be inspected by a competent person in accordance with the user's instruction and safety manual.
Do not use if inspection reveals a problem, an unsafe or defective condition. Must not be repaired by other than manufacturer or an authorized service center.

Not user repairable.

Installation and use:
Ensure that all components and parts are in perfect working condition and working properly. Make sure that your anchoring point is in perfect working condition.
Install the mast / davit arm in a base and lock it with the lock pin.
Position the winch support bracket at the desired height and lock it with the two lock pins attached on the bracket. Install the winch on the bracket, pass the cable into one of the corner pulleys. Put back the pin so the cable cannot go out. Finally, pass the cable into one of the head pulleys. Put back the pin so the cable cannot go out.
Only adaptors and brackets approved, certified and recommended by the manufacturer are to be used with the XTIRPA system.

Warnings:
For all other mast / davit arm application, consult the manufacturer or distributor. Manufacturer's instructions must be followed for proper use and maintenance of this product. Alterations or misuse of this product or failure to follow instructions may result in serious injury or death, for which manufacturer and distributor disclaim all warranties and liabilities whatsoever. User, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against manufacturer and distributor derived there from.

Products manufactured by:
Innovative Public Utility Products Inc.
1040 boul. Industriel
Granby, QC, Canada J2J 1A4
www.xtirpa.com
S2395-102 revB

Made in Canada

SERIAL NUMBER LABEL

Product serial number →
Product number →

XTIRPA

Product No. Lot No.
Serial No. Mfg. date
www.xtirpa.com Manufactured by:
Innovative Public Utility Products Inc.
Granby, QC, Canada Made in Canada

Manufacturing date ←
Manufacturing batch number ←

CE ACCREDITATION LABEL

Accredited standard's no. →

EN 795:2012
Type A
S2337-003 revD

Product standard →

CE ACCREDITATION LABEL

Notified body's no. →

Accredited standard's no. →

CE 2754
EN 795:2012
Type B
S2324-004 revB

Product standard →
European compliance →

XTIRPA

0°

≤ 1350 lbf (6 kN)

360 lbs (164 kg)

6,480 lbf-pd (732 N-m)

S2167-006 revB

XTIRPA

0°

≤ 1350 lbf (6 kN)

360 lbs (164 kg)

5,400 lbf-pd (610 N-m)

S2167-007 revB


ATTENTION

ANCRAGE DE SAUVETAGE
CAPACITE: 5000lbf (22kN)

S2160-010 RevB

-8- CALCULATION DIAGRAM

Ground Clearance:

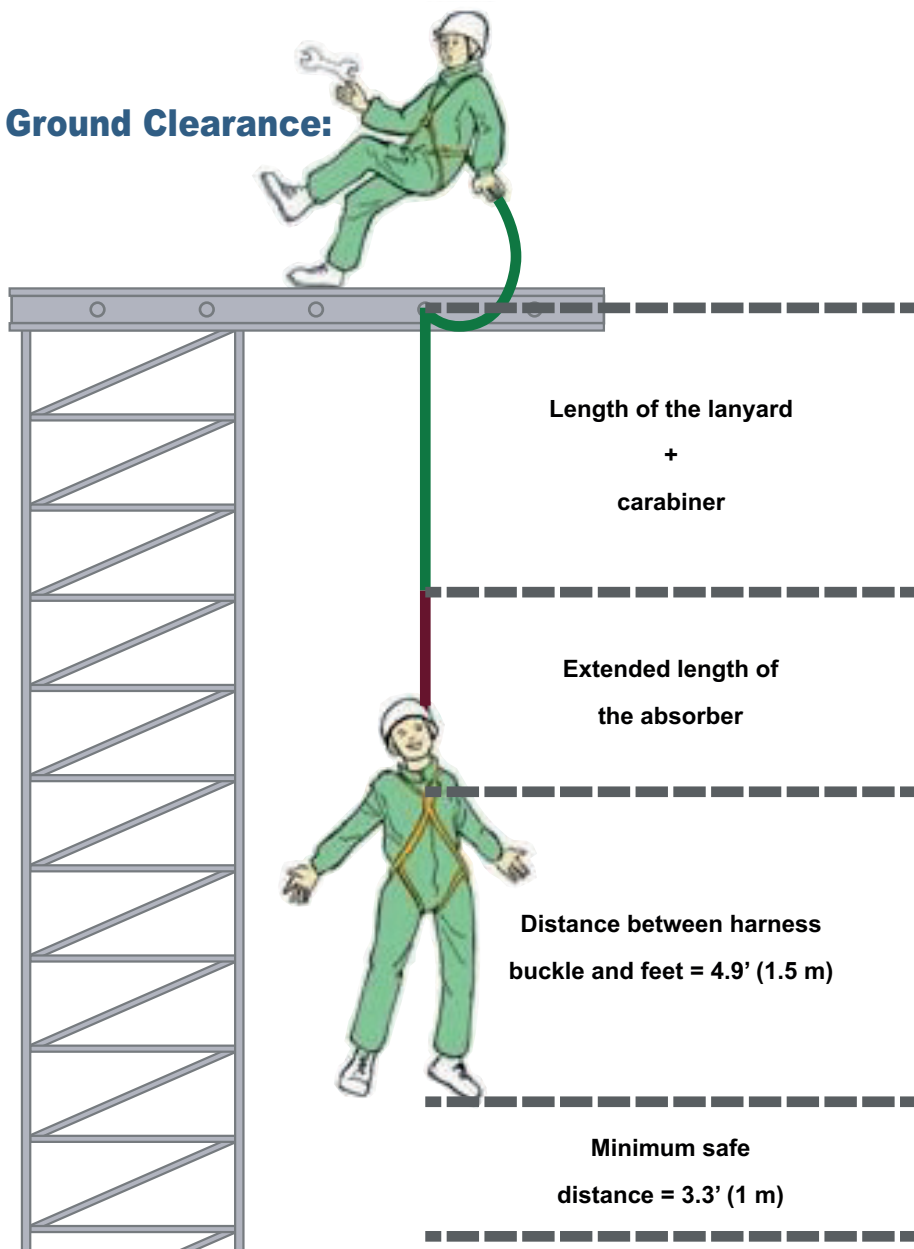

Pay attention to the distance to the ground!

Product: _____

Purchasing date: _____

Model number: _____ Serial number: _____ Manufacturing date: _____

Date of next inspection:

Date of 1st use:

[illegible]

COMMENTS:

*Any failure to follow the Manufacturer's instructions contained in the Instruction and safety manual, including with regard to the inspection and maintenance of the XTIRPA system and of components and parts thereof, will cause warranty to become null and void and may result in serious injury or death of the user, for which the Manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against Manufacturer and derived there from.

Manufactured by: INNOVA Public Utility Products Inc. 1040 boul. Industriel, Granby, Quebec, Canada J2J 1A4

Tel: (450) 777-1240 Fax: (450) 372-9936



REGISTRATION LIMITED WARRANTY FORM



Produit de Services Publics - Public Utility Products inc.

This warranty applies only to the original purchaser and is the only one applicable to the Xtirpa System, and is in lieu of all other warranties, expressed or implied. The purchaser has to complete and return to INNOVA Public Utility Products Inc., all information within thirty days of purchase. Otherwise limited warranty will be void, if the product is not registered.

Register now: Mail or fax this registration form or visit our web site and register online.
Mail: INNOVA Public Utility Products Inc., 1040, boul. Industriel, Granby J2J 1A4
Fax: (450) 372-9936
Web site: www.xtirpa.com

XTIRPA PRODUCT

Model number: _____

Purchasing date: _____

Serial number: _____

Manufacturing date: _____

CUSTOMER / USER INFORMATION

Company: _____

Phone: _____

Street address: _____

Fax: _____

City: _____

E-Mail: _____

State: _____

Zip: _____

Name: _____

Do you wish to be on Innova's mailing list

Position: _____

for new product literature: YES ☐

NO ☐

*Any failure to follow the Manufacturer's instructions contained in the instruction and safety manual, including with regard to the inspection and maintenance of the XTIRPA system and of components and parts there of, will cause warranty to become null and void and may result in serious injury or death of the user, for which the Manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against Manufacturer and derived there from.

Manufactured by: INNOVA Public Utility Products Inc. 1040 boul. Industriel, Granby, Quebec, Canada J2J 1A4

Tel: (450) 777-1240 Fax: (450) 372-9936

NOTES

[illegible]



CONFINED SPACE SAFETY SOLUTIONS

Head Office and Manufacturing Plant

Innova Public Utility Productions Inc.
1040, Boulevard Industriel
Canada, Qc, Canada
J2J 1A4

Phone: 450.777.1240
Toll free: 1.800.461.1937

www.xtirpa.com



Xtirpa is a registered trademark of Innova
Public Utility Productions Inc. used under
license in Canada

MU8014-012ENG rev04